


ARCORA® INTERNATIONAL



INSTRUCTION MANUAL

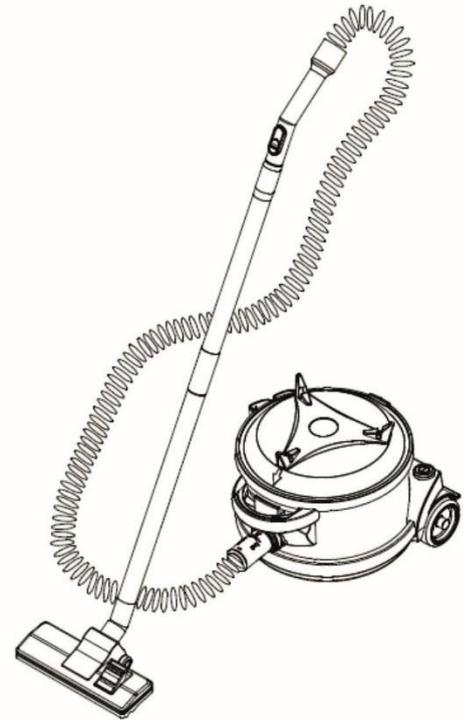

ARCORA® INTERNATIONAL

Marsstraße 9 • 85609 Aschheim - Germany
Tel.: 089/ 14 33 29 3-0 • Fax: 089/ 14 33 29 3-29

www.arcora-group.com
info@arcora.de

Dear Customers

Thank you for choosing ARCORA. We sure you want to know your new vacuum cleaner as quickly as possible and operate it safely. Please read this user manual before using the device. To avoid accidents and damage, start with the chapter >> Safety instructions << and always follow the instructions given here.

Table of contents

Technical details	Section 1
Operating elements	Section 2
Handling	Section 3
Safety Instructions	Section 4



Section 1

Technical Details

The PRO1.1 vacuum cleaner can be used as a dry vacuum cleaner for cleaning large areas in offices, hotels, restaurants, doctors' practices, shops. The vacuum cleaner can be used to clean hard floors (stone, parquet, plastic) as well as soft floors (carpets, upholstered furniture, curtains). The vacuum cleaner is equipped with a filter system consisting of a foam, a motor protection and an exhaust filter. Due to its surface design, the dust filter effectively retains almost all dust particles. Through the use of electrostatic layers, a high efficiency of the motor protection filter against pollen, mold and other microorganisms is achieved and the exhaust filter prevents the escape of carbon brush dust. The robust and modern construction guarantees a long service life and convenient operation with low usage costs.

Technical Details

Netzanschluss: 230V, 50 Hz

Cable: ca. 15 m

Max. Leistung: 900 W


Suction: 2700 mm H₂O

Features: insulated (Class II), interference-suppressed, CE-sign



Section 1

Technical Details

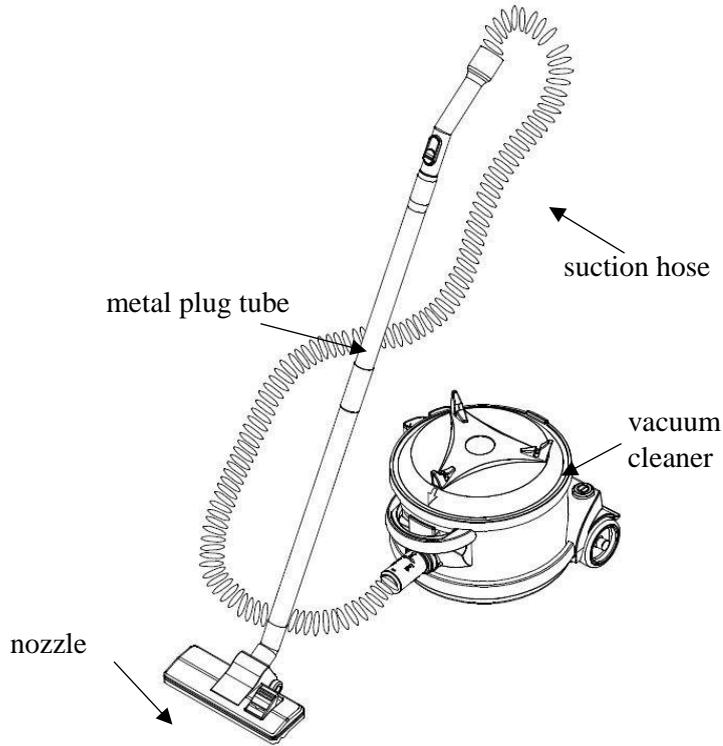


brush nozzle



crevice nozzle



 upholstery nozzle




paper filter bags

Section 2

Operating elements

The flexible suction hose with rotating end pieces facilitates the operation of the accessories. The bleed valve is on the handle of the suction hose.

With the slider of the valve you can adjust the suction power, especially recommended for curtain cleaning.

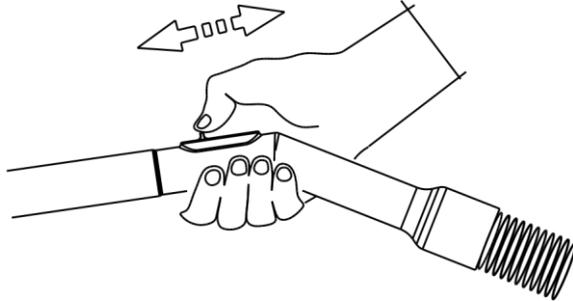

Connect the metal tube with the handle of the suction hose and the accessory to the pipe.

Upholstery nozzle

With the upholstery nozzle you can dust off upholstered furniture, mattresses, pillows, curtains, etc.



Brush nozzle

The brush nozzle is suitable for extracting uneven surfaces, such as profile strips.



Crevice nozzle

The crevice nozzle is suitable for the suction of wrinkles, joints and corners or niches that you can't reach with the floor nozzle.




Section 2

Operating elements


Nozzle

The floor nozzle is the most commonly used element of the accessory. It is suitable for large flat surfaces such as carpets or floors. For vacuuming smooth floors such as PVC, parquet or stone, the floor nozzle is additionally equipped with a brush. If necessary, press your foot on the rocker arm to extend or lower the brush. Carpets and carpets should be vacuumed without a brush. To do this, push the toggle switch forwards.

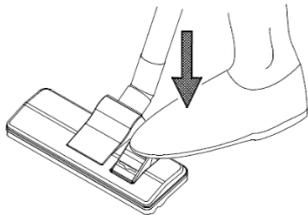


Paper filter bag

The vacuum cleaner works with a paper dust bag, which has to be changed as soon as it gets full. The cardboard reinforcement of the bag must be inserted into the guide below the opening for the suction hose.

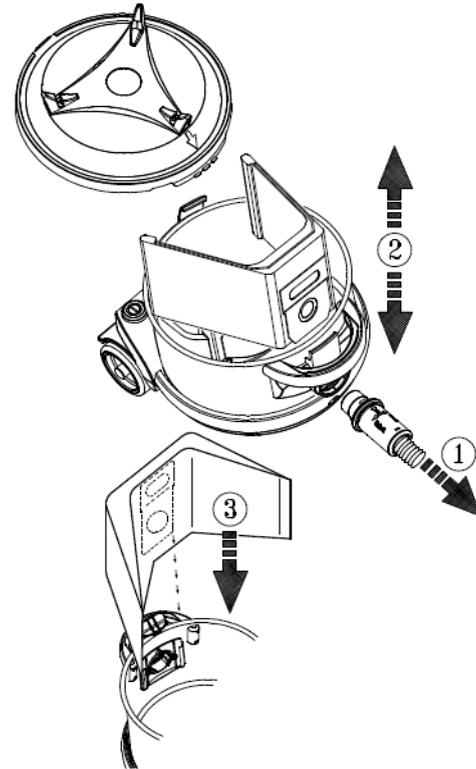

Section 3

Handling

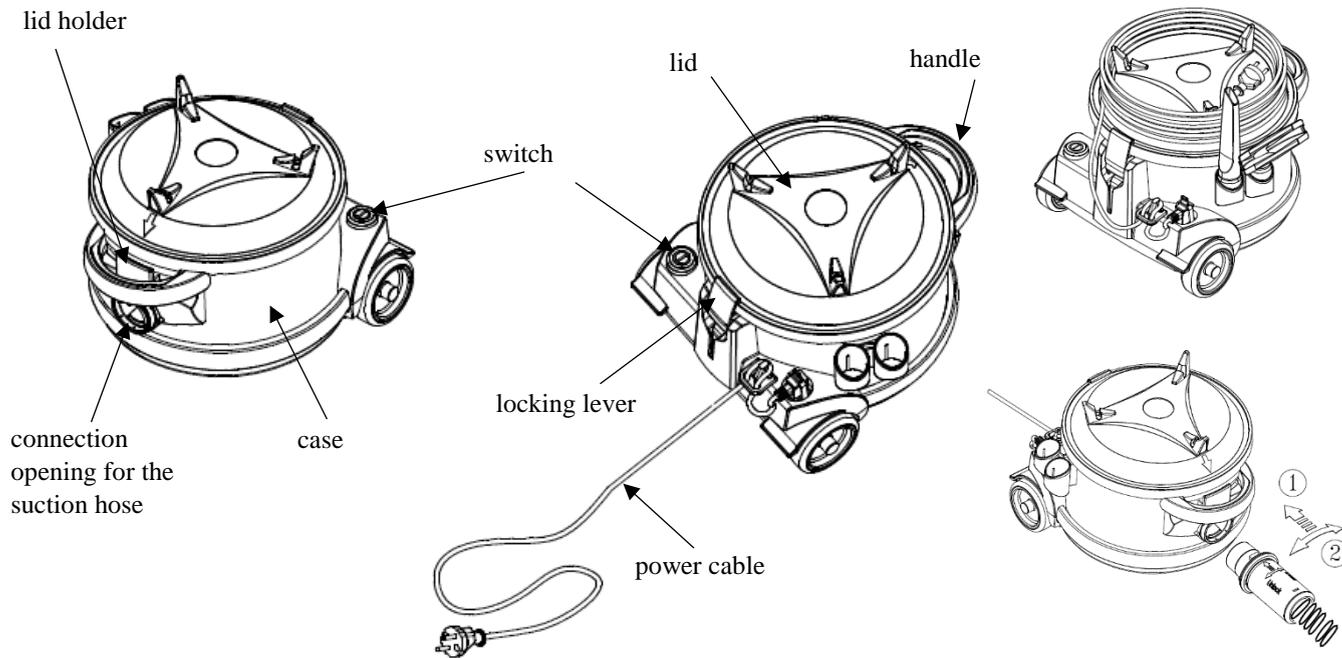

Before switch on the vacuum cleaner:

- ◆ Please make sure that the paper bag is correctly inserted in the housing inlet. Do not use the vacuum cleaner if no dust bag is inserted.
- ◆ Insert the suction hose into the connection opening and turn it slightly to the right or to the left to lock.
- ◆ Insert metal pipes into each other and put them together with the handle of the hose. Place the necessary nozzle on the lower end of the suction pipe.
- ◆ Plug the power plug into the socket.
- ◆ Press the switch button to switch on the device.

After vacuum

Once cleaning is complete, turn off the power. To switch off, tap on switch button. Disconnect the power plug from the socket.

Wrap the cable around the case and push the connector into the clip on the cable.

Replacing the dust bag

- ◆ Turn off the vacuum cleaner and pull out the plug.
- ◆ **Remove the suction hose from the device.**
- ◆ Unlock the dust bag chamber with the cover lever, remove the cover.
- ◆ Grasp the dust bag on the cardboard reinforcement and carefully pull it out.
- ◆ Insert a new dust bag into the dust bag chamber. The cardboard reinforcement of the bag must be inserted into the guide below the opening for the suction hose.
- ◆ Close the lid again, check before commissioning whether all components are properly installed.


Section 3

Handling

Replacing the foam and motor protection filter.

From time to time, the foam and motor protection filters must be changed. In the event of visible contamination, you can clean them by rinsing in lukewarm water with a little detergent and after complete drying, replace the cover.


- ◆ Turn off the vacuum cleaner and remove the cover.
- ◆ Release the three cover clips and remove the cover insert and the foam filter

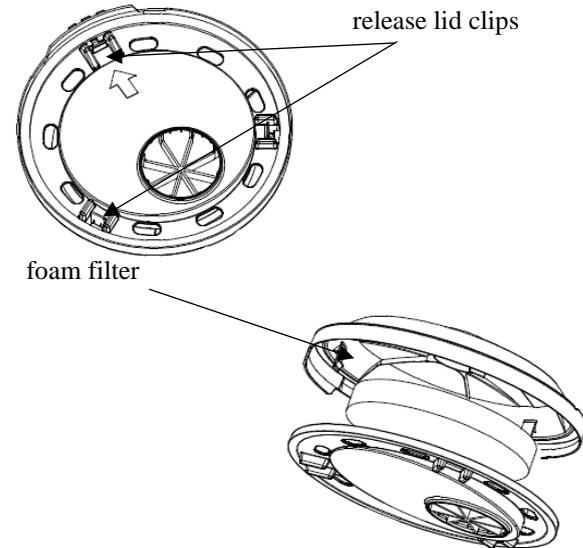

Section 3

Handling

- ◆ Remove the engine protection filter from the grid of the bonnet.
- ◆ Please place new or cleaned motor protection filter on the grid of the bonnet.
- ◆ Place the lid insert on the vacuum cleaner housing – with the grid on the motor protection filter. Put foam filter in the circular nest.
- ◆ Attach the lid to the handle and push the housing closed until the clamps engage.
- ◆ Close the cover with the cover lever.

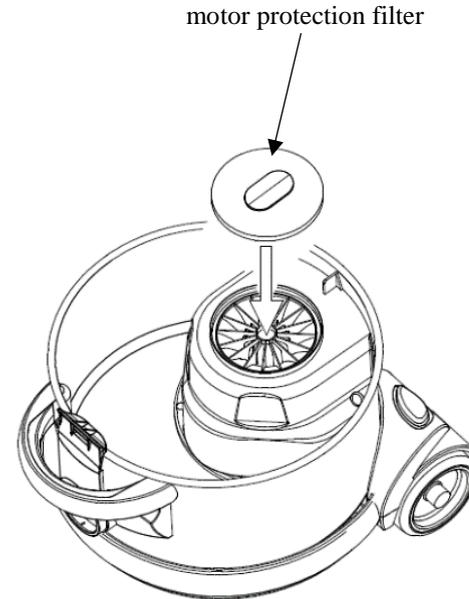

Section 4

Safety Instructions

Safety Instructions

- ◆ Please note that improper handling of electrical appliances may present hazards that may not be detected by children. Have children work with the device only under the supervision of an adult.
 - ◆ Repairs to electrical appliances may only be carried out by authorized specialists. If the power cord of this equipment is damaged, it must be replaced by the manufacturer or service center or a similarly qualified person to avoid hazards. Improper repairs can result in serious danger to the user. In case of self-made repairs, improper connection or incorrect operation liability and warranty claims are excluded.
 - ◆ The vacuum cleaner may only be used with the paper filter dust bags and filters approved for this machine. Only then is the perfect suction guaranteed. Used or damaged dust bags must not be reused.
 - ◆ Never leave the appliance in damp rooms after use. Never vacuum up water or other liquids or wet dirt.
 - ◆ Do not vacuum glowing ashes, burning cigarettes or sharp objects, glass splinters, plaster, cement or stone dust with the vacuum cleaner.
 - ◆ Disconnect the device from the power supply when cleaning it, change the dust bag or filter or leave it unattended.
-

