

FINE STONE CLEANER

PREMIUM QUALITY
MADE IN GERMANY



IDEAL

ALKALINE STONEWARE CLEANER



PROPERTIES

IDEAL is a special cleaning agent concentrate for fine stoneware and safety tiles. Can be used as a basic cleaner as well as a maintenance cleaner. Easily removes even stubborn, oily and greasy dirt. Cleans deep into the pores, thoroughly and intensively. IDEAL is **EDTA-free** and can therefore be disposed of in the sewage system without hesitation.

APPLICATION AREAS

Suitable for all waterproof and alkali-resistant floor coverings, especially ceramic tiles and alkali-insensitive stone coverings. For manual and machine cleaning. Check material compatibility in advance. We accept no liability for damage caused by improper use.

APPLICATION


Mechanical basic cleaning: Dilute IDEAL 10 % with cold, clear water. (1 part IDEAL to 9 parts water). Pre-water the floor covering incl. joint material with plenty of cold water. Then apply plenty of cleaner solution to the floor (500 - 650 ml application solution/m²). Reaction time approx. 5 minutes. Keep the liquor moving manually or mechanically during the application time. After the exposure time, use a single-disc machine with a suitable pad/brush to remove the entire floor covering and thoroughly vacuum the treated floor surface. Rinse the floor thoroughly (several times if necessary) with clean water and vacuum again. Remove dissolved residues from the surface by wiping with clear water - if necessary, rinse the surface and remove with a water vacuum cleaner. Translated with www.DeepL.com/Translator (free version)

Routine cleaning:

Prepare IDEAL 0.25 - 5.0 % application solution. Apply with a scrubber-dryer or manually in a 2-stage wet wiping procedure.

INGREDIENTS

< 5 % non-ionic surfactants, solvents, hydrotropes, phosphates, dyes, fragrances

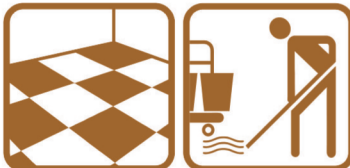

pH-value (at 20°C)

9,5

0 2 4 6 8 10 12 14

CONTAINERS ART.-NO.

1 L

01153

10 L

01154

Attention!

Causes severe eye irritation

- Do not breathe dust/fume/gas/mist/vapour/aerosol.
- Wash thoroughly with water after use.
- Wear protective gloves/protective clothing/eye protection/face protection/ear protection.
- IF IN EYES: Rinse cautiously with water for several minutes. Remove existing contact lenses if possible. Continue rinsing.
- Immediately call POISON CENTRE/doctor.



- **Condition:** Liquid
- **Colour:** Clear
- **Odour:** CHARACTERISTIC

- Before always read the indications and product information.
- For commercial / industrial use only!
- Reusable containers

Follow the instructions for use on the label. The information provided is based on our current knowledge, but they do not constitute a guarantee of product properties and do not establish a and do not constitute a contractual legal relationship. Safety data sheet available on request.



ARCORA® INTERNATIONAL

Marsstraße 9 • 85609 Aschheim near Munich - Germany
Fon: +49 (0)89 - 14 33 29 30 • Fax: +49 (0)89 - 14 33 29 329

www.arcora-group.com
info@arcora.de